




ADVENTURE KINGS SWIFT TENT USER MANUAL

AKTA-5PTENT001

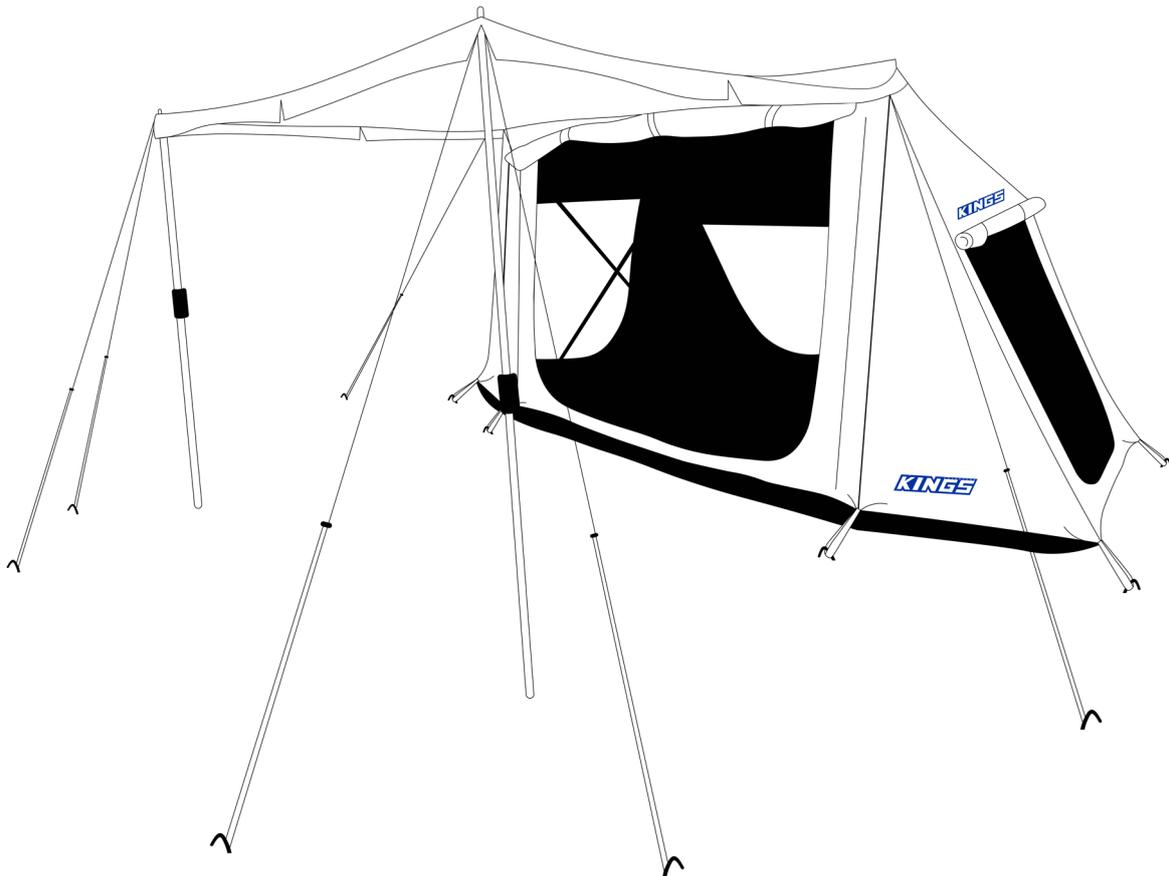

V1.1

**PLEASE READ AND UNDERSTAND THIS MANUAL
COMPLETELY BEFORE USING THIS PRODUCT.**

CONTENTS

1. INTRODUCTION.....	3
2. SAFETY INFORMATION.....	3
3. COMPONENTS.....	3
4. CARE INSTRUCTIONS.....	4
5. SETUP INSTRUCTIONS.....	5
6. PACK DOWN INSTRUCTIONS.....	9
7. WARRANTY CARD.....	11

1. INTRODUCTION

This manual covers the safety information, care instructions, unpacking & initial setup, general setup & pack down for the Adventure Kings Swift Tent. The Adventure Kings Swift Tent is designed to be used as a recreational outdoor camping tent. For any questions or warranty claims please call 1800 883 964.

Covered by Australian Registered Design 201911281.

2. SAFETY INFORMATION

Please read and understand all the following safety information prior to using the Adventure Kings Swift Tent. Adhering to the following safety warnings will reduce the risk of damage to the product or injury to persons.




SAFETY WARNINGS




- The use of open flame, fuel stoves, generators, combustion motors, heating devices or cigarettes near or inside the Adventure Kings Swift Tent is prohibited. The Adventure Kings Swift Tent is not designed to ventilate any internal harmful gases or withstand fire.
- Take care of any pinching hazards caused by the internal frame when setting up or packing down the Adventure Kings Swift Tent. Always keep hands clear of pinch points.
 - Do NOT attempt to set up the Adventure Kings Swift Tent in extreme weather.
- It is recommended that all the provided guy ropes & pegs are used in the Adventure Kings Swift Tent setup irrespective of weather conditions.
- Campsite selection should always involve a quick check to ensure the safety of any Adventure Kings Swift Tent occupants. Refrain from setting up under large trees, close to waterways or near any other potential environmental hazards.
 - The Adventure Kings Swift Tent is NOT designed to support any weight.

3. COMPONENTS

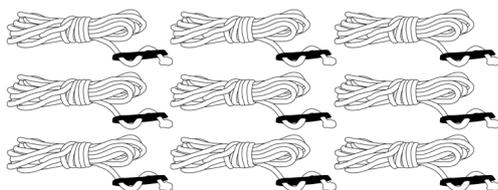

9 x GUY ROPES

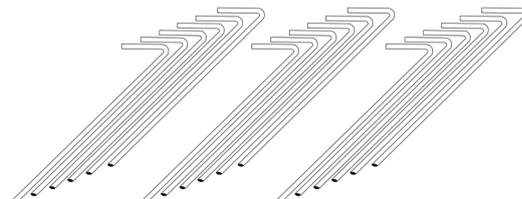

18 x PEGS



2 x ALUMINIUM POLES

4. CARE INSTRUCTIONS

Please read and understand the following care instructions prior to using the Adventure Kings Swift Tent. Obeying these care instructions will increase the ability of the Adventure Kings Swift Tent to withstand the elements whilst also prolonging the lifespan of the Adventure Kings Swift Tent.

Initial waterproofing/seasoning of the canvas is the most important step in caring for the Adventure Kings Swift Tent. See following steps.

STEP 1

Set up the Adventure Kings Swift Tent outside near a water hose.

STEP 2

Ensure all canvas doors are rolled down and zipped shut.

STEP 3

Using the water hose, completely wet the whole tent focusing on the canvas seams.

STEP 4

Once all of the canvas & seams have been wetted, allow the Adventure Kings Swift Tent to completely dry.

Note: some water ingress may occur when seasoning the tent.

STEP 5

Repeat steps 3 & 4 a minimum of three times.

STEP 6

Once completely dry, pack down the Adventure Kings Swift Tent into the carry bag. The Adventure Kings Swift Tent is now ready for future camping adventures.

5. SETUP INSTRUCTIONS

Setting up your Adventure Kings Swift Tent is a simple process which is explained in the following section. Please read the safety information & care information sections of this user manual, before using the Adventure Kings Swift Tent.



STEP 1

Find a flat area and safe campsite to begin initial setup. Unzip the carry bag and lift out the Adventure Kings Swift Tent. Put the pegs & guy rope bag and awning poles off to one side.




STEP 2

Start by opening out the left hand side pivoting tent frame first followed by the right hand side. Left and right is determined when facing the front door of the tent.

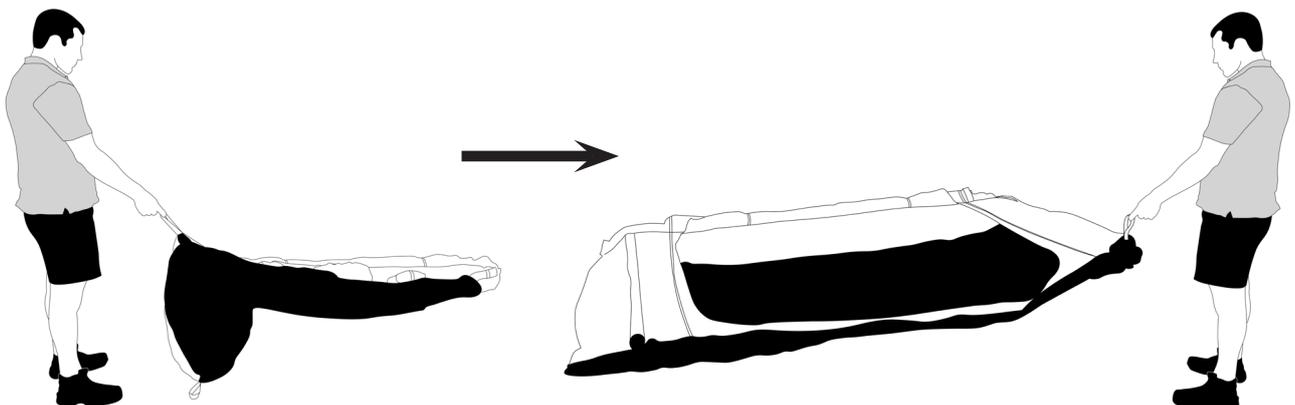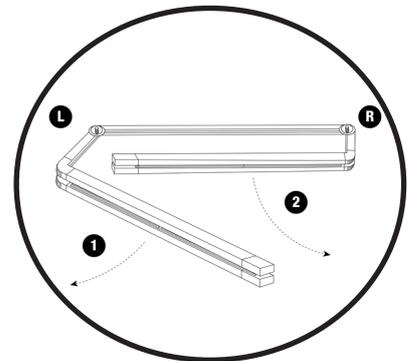


STEP 3

Unzip the front door & awning. Step into the tent through the front door and grab the frame in the centre. Begin to lift the frame up. The Adventure Kings Swift Tent will start to take shape. Lift the frame until the front door wall is nearly vertical.

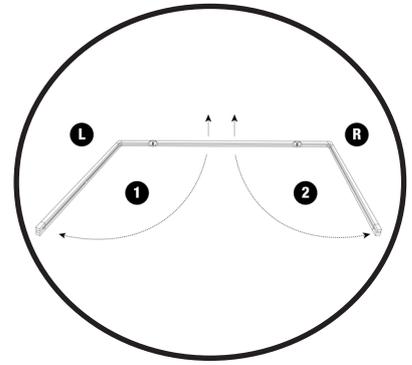


STEP 4

Whilst holding the front wall close to vertical with one hand grab the side scissor locks with the other hand and slide them into the open position. A velcro safety strap is located on each scissor lock to secure them and prevent unlocking.

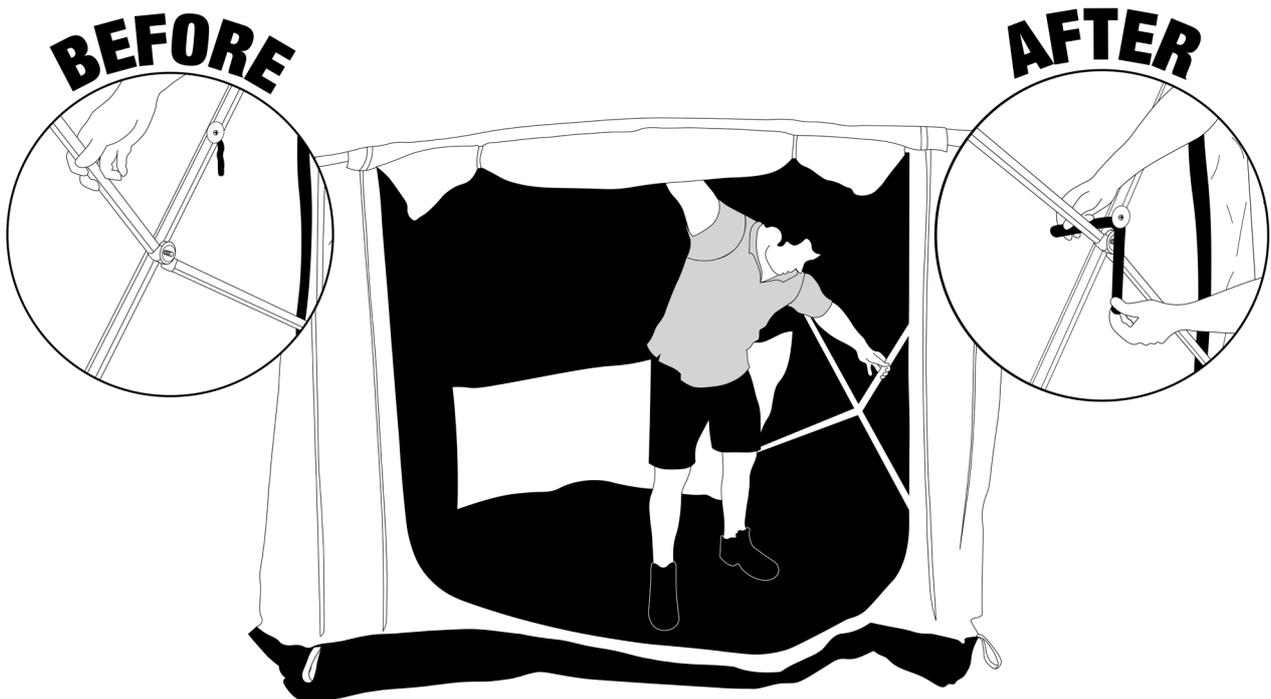

STEP 5


Retrieve the pegs & guy ropes bag. Start to peg down each corner of the Adventure Kings Swift Tent followed by pegging down all the guy ropes. All supplied pegs & guy ropes should be used irrespective of weather conditions.

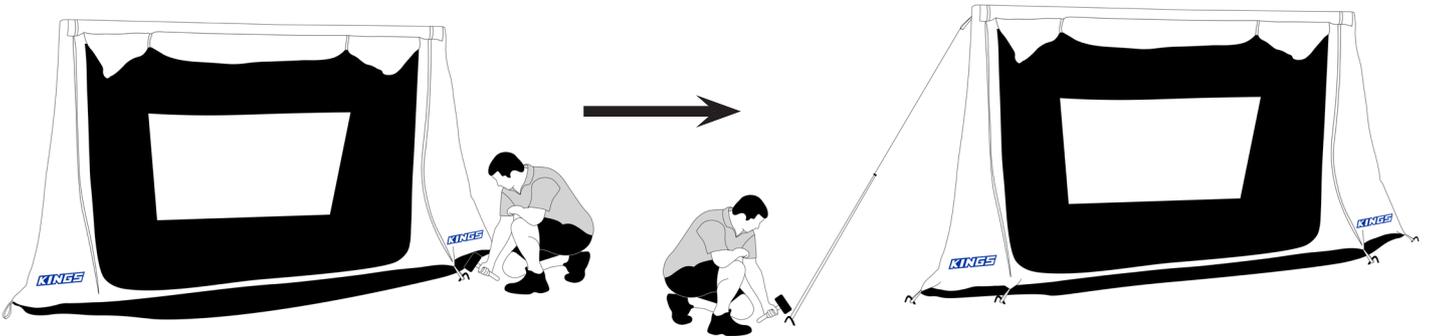


STEP 6

This step has three options.


1. Zip the front awning panel shut to add a second layer of canvas to the front door.
2. Unzip the front awning, roll the awning up and secure using plastic toggles.
3. Unzip the front awning and insert the two telescopic awning poles into any of the awning eyelets. The telescopic awning poles can be extended or shortened using the camlock. Once awning pole height has been set add guy ropes to the top of the awning poles (2 ropes per pole), peg out and tighten. Max recommended awning height is 1850mm.

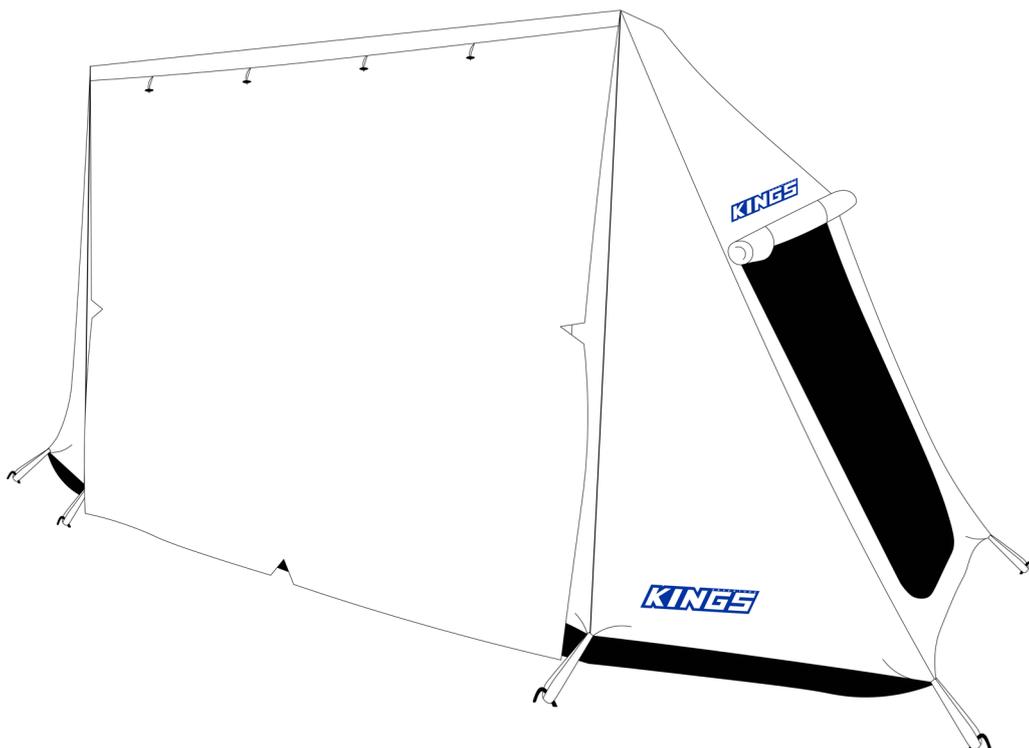


ZIPPED SHUT

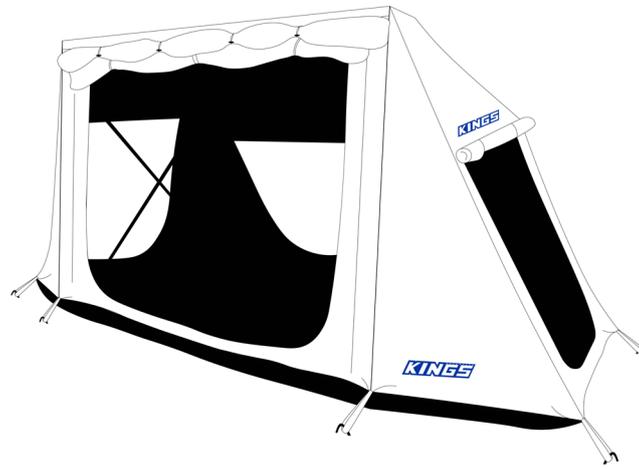

ROLLED UP

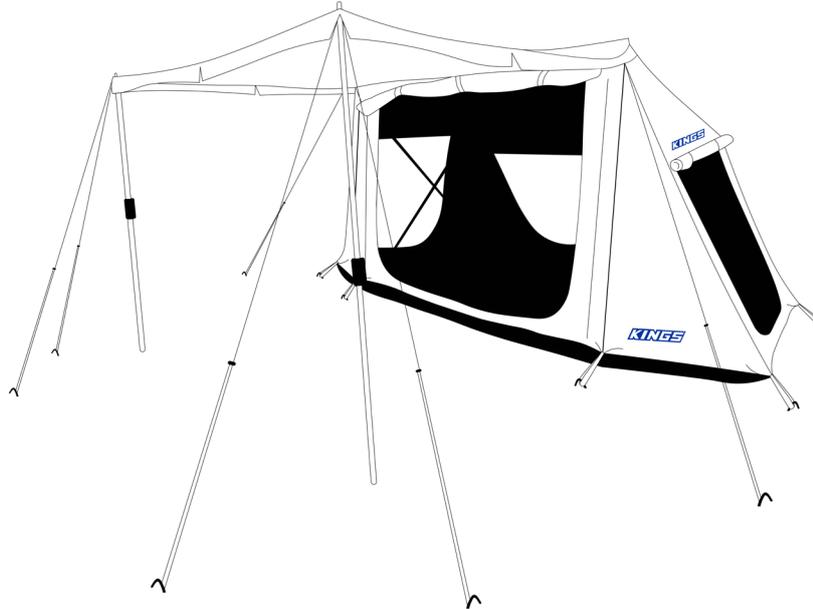

AWNING POLES IN CORNER LOCATION

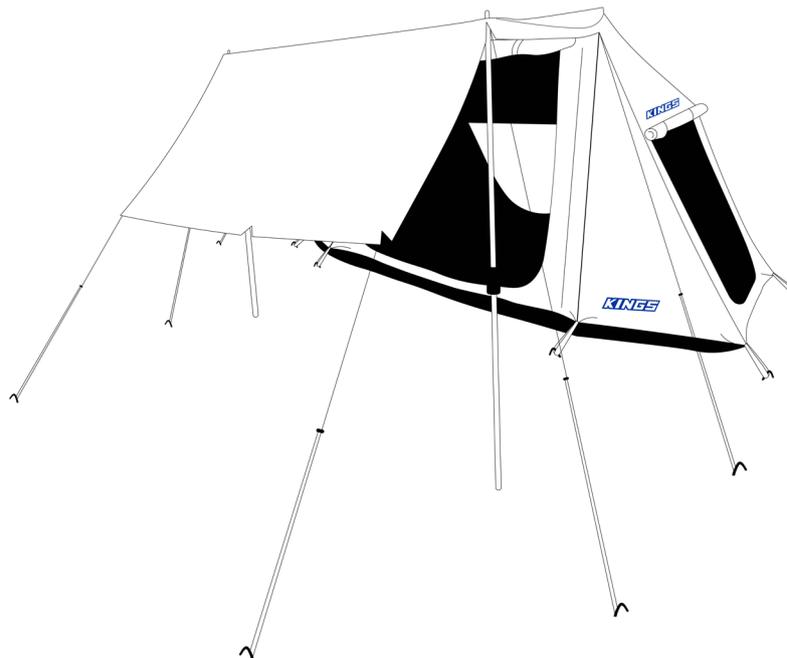

AWNING POLES IN CENTRE EYELETS AND FRONT SECTION GUY ROPED DOWN TO AN ANGLE

Note: The centre eyelets can be tied down with additional guy ropes to create awning water runoff during wet weather.

6. PACK DOWN INSTRUCTIONS


Packing down the Adventure Kings Swift Tent is simply a reverse of the setup instructions. The following pack down tips will help to make sure every camping trip with the Adventure Kings Swift Tent is an easy one.

PACK DOWN TIP 1

Never pack down the Adventure Kings Swift Tent wet as this can cause mould and unwanted smells. If there is no option but to pack down the tent wet, then it is recommended to set the tent up once the wet weather has passed and allow it to dry.


PACK DOWN TIP 2

Fold the right hand side frame inwards before the left hand side when reversing setup Step 2.

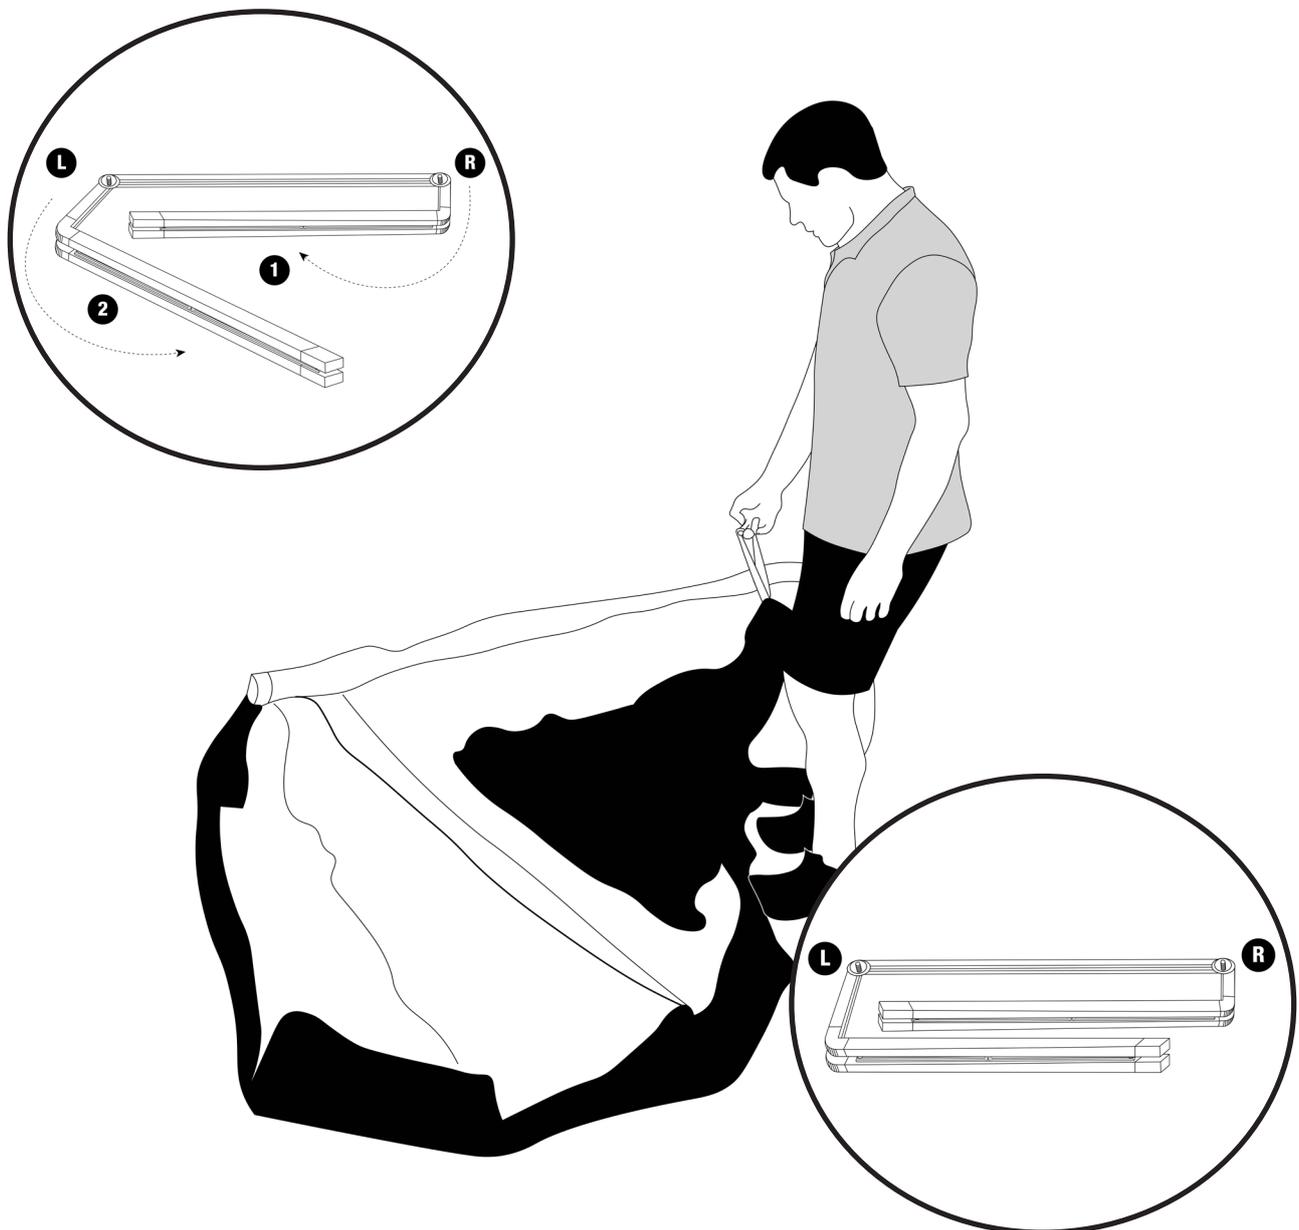

PACK DOWN TIP 3

The two rear guy ropes on the Adventure Kings Swift Tent can be permanently tied to the tent tag and stored in the convenient canvas pouch located directly under the tent tag when packing down.

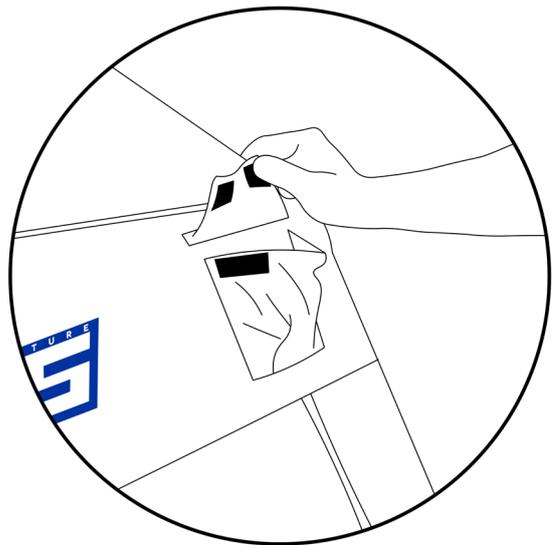


PACK DOWN TIP 4

Never use soap, detergent, petrol or solvents to clean the Adventure Kings Swift Tent. Only use mildly warm water and a soft brush.

PACK DOWN TIP 5

Slightly unzip all the canvas and mesh doors when packing down to allow the air to escape when rolling up. This will make it easier to get back in the carry bag too.

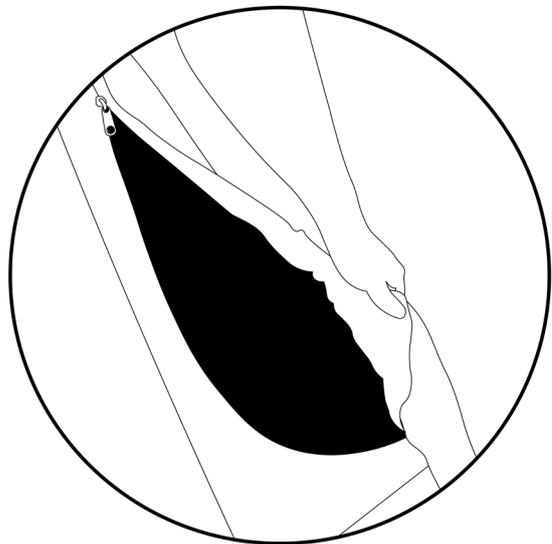

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au